

## Programmable Parameter List: Dealer Level

Values listed as "FUSO Default" are the values programmed by FCCC

Feature	VEPS ID	Parameter Name	Description	FUSO Default	Dealer Coding
PTO	102	PTO Park Brake	Enable if park brake needs to be applied to allow PTO function	ON	<b>NOT USED</b>
	104	PTO Service Brake	Service Brake Apply will turn off PTO function	ON	
	106	PTO Park/Neutral	Vehicle must be in Park/Neutral to allow PTO function	ON	
	110	PTO Engine Torque Limit	Max engine torque allowed when PTO engaged in Ft.lbs	500 Ft.lbs	
	120	PTO Max RPM	The maximum RPM the PTO system can control to	2300 RPM	
	122	PTO Setpoint 1	1st PTO rpm setpoint	1000 RPM	
	124	PTO Setpoint 2	2nd PTO rpm setpoint	1200 RPM	
	126	PTO Setpoint 3	3rd PTO rpm setpoint	1800 RPM	
	128	PTO Setpoint 4	4th PTO rpm setpoint	2200 RPM	
	130	PTO Ramp Rate	Rate of engine speed increase or decrease between setpoints or during manual PTO rpm increment	200 RPM	
	150	PTO Road Speed Max/Cancel Vehicle Speed	Speed to cancel PTO operation.	0 mph	
152	PTO Road Speed Max Threshold	Speed below PTO Road Speed MAX to reenable PTO operation	0 mph		
Remote PTO (transmission PTO)	200	Remote PTO Enable	Switch to allow PTO control via J1939 messages	ON	<b>DO NOT CHANGE</b>
	202	Remote PTO Park Brake	Enable if park brake needs to be applied to allow Remote PTO function	ON	
	204	Remote PTO Service Brake	Service Brake Apply will turn off Remote PTO function	ON	
	205	Remote PTO J1939 Source ID	Service Brake Apply will turn off Remote PTO function	33	
	206	Remote PTO Park/Neutral	Vehicle must be in Park/Neutral to allow Remote PTO function	ON	
	210	Remote PTO Engine Torque Limit	Max engine torque allowed when Remote PTO engaged in Ft.lbs	500 Ft.lbs	range: 0-750 ft-lbs
	220	Remote PTO Max RPM	Max RPM that Remote PTO can control to	2300 RPM	range: 1000-4000
	222	Remote PTO Setpoint 1	1st Remote PTO rpm setpoint	1100 RPM	range: 1000-4000
	224	Remote PTO Setpoint 2	2nd Remote PTO rpm setpoint	1400 RPM	IGNORED
	230	Remote PTO Ramp Rate	Rate of engine speed increase or decrease between setpoints or during manual Remote PTO rpm	200 RPM	range: 1-10,000
	250	Remote PTO Road Speed Max/Cancel Vehicle	Speed to cancel Remote PTO operation	0 mph	<b>DO NOT CHANGE</b>
252	Remote PTO Road Speed Max Threshold	Speed below PTO Road Speed MAX to reenable Remote PTO operation	0 mph		